


Assembly Instructions for the Model 50

The Model 50 Mobile Hand Sanitizer Station comes with the following parts:

1. Concave Washer
2. L Bolt
3. Stand Base
4. Adjustable Pole
5. Dispenser Holder
6. Dispenser
7. Drip Tray
8. MobileSaniStation Sign
9. Sanitizer Container
10. Dispenser Key
11. Four (4) C Batteries

Mobile Hand Sanitizer Station
Model 50
Assembly Instruction


www.mobilesanistation.com

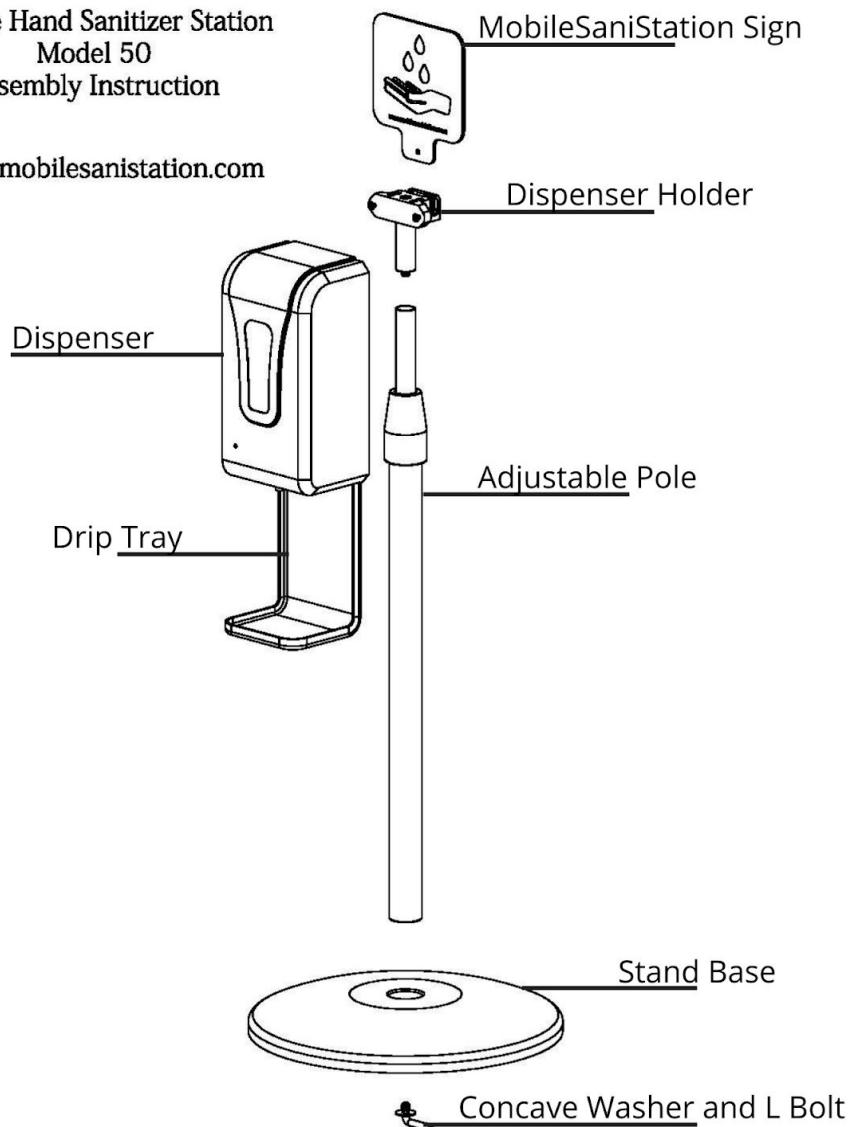

The Sanitizer Container should already be installed inside your dispenser upon receiving the product and the Dispenser Key should also be in the box. Batteries should be inserted into the Dispenser before you begin assembly or fill the Dispenser.

Battery Installation or Exchange:

1. The Model 50 uses four C batteries which come with each unit purchased.
2. Take the Dispenser Key and insert the two long prong ends into the small slots on the top of the Dispenser that sit equal to the key prongs. It should slide in easily, and with a firm but gentle push down the front of the Dispenser should pop open, revealing the Sanitizer Container and the dispensing mechanism as shown below.

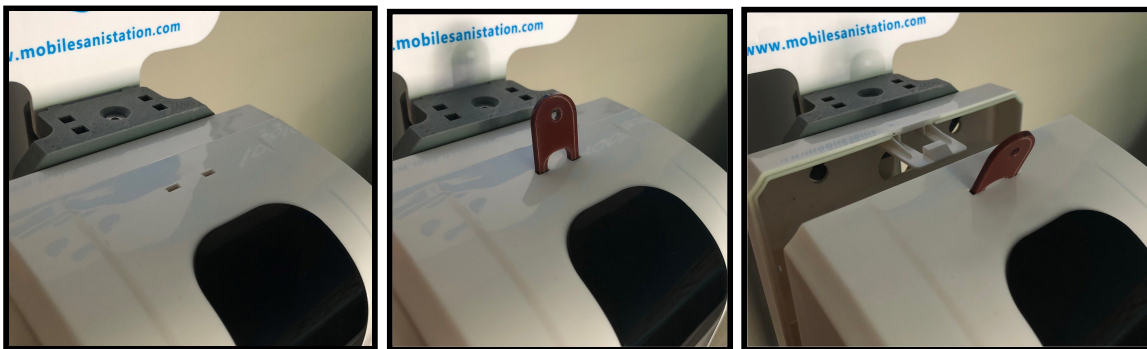

3. On the right side of the mechanism and container is a grey panel with an arrow, pull the panel in the direction the arrow is pointing to reveal the battery compartment.



4. Remove any old batteries, place the new ones in the compartment, and slide the panel back into place before closing the Dispenser shell or filling the Sanitizer Container.
5. On the right hand side of the Dispenser shell is the ON/OFF switch, switch this into the ON position and run your hand underneath the Dispenser. You will hear the sound of the mechanism dispensing if all the steps above were followed correctly.

Stand Assembly and Dispenser Installation:


1. Take the Stand Base, Adjustable Pole, Concave Washer, and L Bolt to begin the base of the stand.
2. The thicker section of the Adjustable Pole should easily slide and sit in the indent of the base.



3. Turn over the Adjustable Pole and Stand Base while they are connected.
4. Place the Concave Washer in the large hole at the center of the Stand Base's bottom, making sure that the Concave Washer's indent is sitting inside the Stand Base hole, as pictured below.
5. Insert the ribbed end of the L Bolt through the hole in the Concave Washer, making sure the end of the L Bolt connects with the bolt hole in the Adjustable Pole's bottom.




6. Turn the L Bolt clockwise until the Stand Base and Adjustable Pole are firmly held together.
7. The Adjustable Pole should now be able to stand on its own.
8. At the top of the skinnier section of the Adjustable Pole is a small hole, place the Washer in line with this hole.
9. Screw the Dispenser Holder clockwise into the hole of the Adjustable Pole.

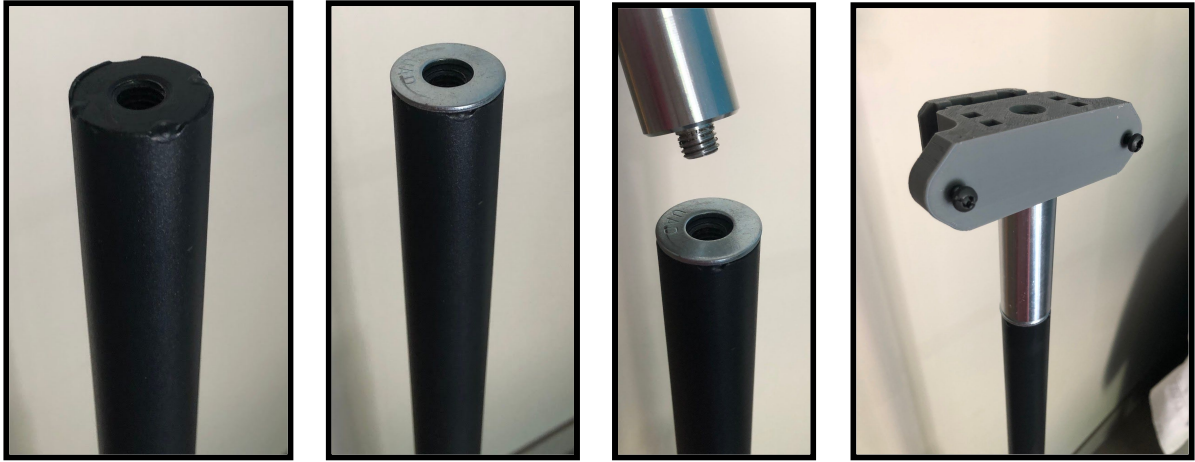

10. Take the MobileSaniStation Sign and slide it into the slot on the back of the Dispenser Holder, lining up the built in screw with the hole in the sign.
11. Use the screw on the back of the Dispenser Holder to tighten the sign into place.




12. The stand is now completed.
13. To install the Dispenser, align the top teardrop shaped holes on the back of the Dispenser with the two screws located on the Dispenser Holder.
14. The Dispenser should easily hang from the screws.

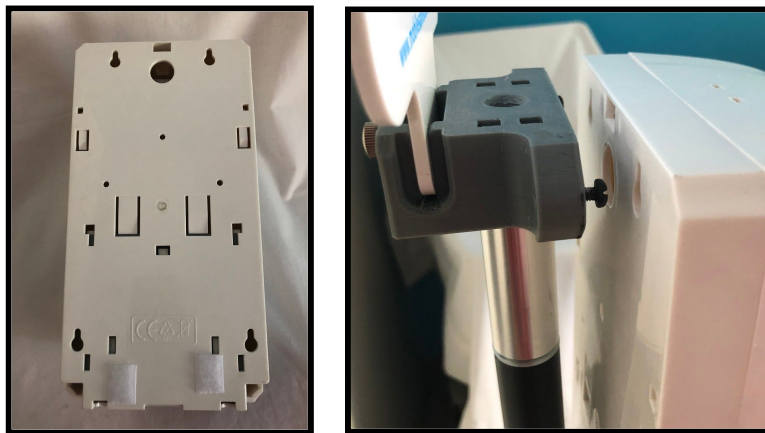

To Install the Drip Tray:

1. Find the two holes at the back of the bottom on the dispenser, the prongs at the top of the Drip Tray should line up with these two holes.

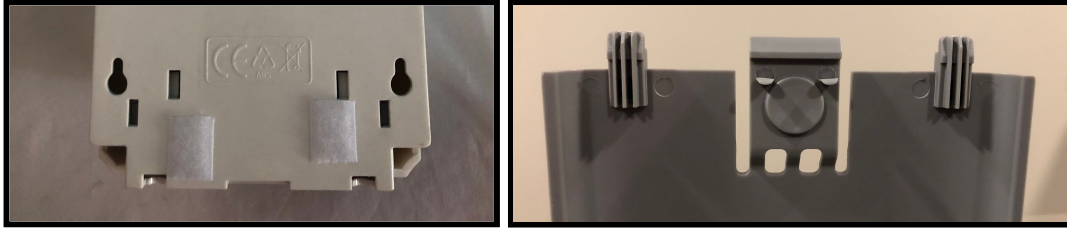

2. In the center of the Drip Trays top is a wider skinny prong which slides into the slit located between the two bottom back holes.
3. All the prongs on the Drip Tray should be slid into the Dispenser at a 30 degree angle
4. The small shelf on the center prong should sit just inside the center slit and the Dispenser and Drip Tray should rest against the pole so that the Drip Tray is held firmly in place.



Opening the Dispenser and Filling the Sanitizer Container:

1. Check to make sure that the Dispenser is turned off before opening the Dispenser.
2. The ON/OFF switch can be found on the right side of the Dispenser, closer to the bottom.



3. To remove and/or fill the Sanitizer Container, take the Dispenser Key and insert the two long prong ends into the small slots on the top of the Dispenser that sit equal to the key prongs.
4. The key should slide in easily, and with a firm but gentle push down the front of the Dispenser should pop open, revealing the Sanitizer Container. (See the Battery Installation Section for further imagery).
5. The Sanitizer Container rubber lid can easily be removed while the container is still inserted and we recommend it be filled from that position.
6. If you wish to remove the Sanitizer Container it can be by simply and gently pulling the Sanitizer Container forward and sliding it off the mechanism. Be careful of the hole at the bottom of the Sanitizer Container if it was previously filled.
7. Carefully fill the dispenser container inside with your chosen sanitizer, do not fill the container past the “1200ml” listed on the side of the container, the recommended fill is between the 900ml and 1200ml marks using the bottom of the letters “1200ml” as the maximum fill line.

Adjusting the Stand Height:

1. It is recommended that the Dispenser and Drip Tray be removed before adjusting the height to avoid damaging the parts.
2. Turn the connector (pictured below) on the Adjustable Pole counter-clockwise while holding the skinnier section.
3. Once the connector is loose enough, adjust the Adjustable Pole to the height needed.
4. Tighten the connector by turning it clockwise, locking in the height of the stand.



Note: We recommend that you test the dispensers compatibility with the sanitizer by filling the container about a quarter of the way, and seeing how easily the sanitizer is dispensed. If the sanitizer is not dispensing we recommend adding small amounts of water to the sanitizer and mixing thoroughly before each test to achieve optimal dispensing for thicker sanitizers.

If you have any further questions about our products check out the FAQ section of our website: mobilesanistation.com, or contact us online on Facebook, Twitter, or LinkedIn! For further explanation on assembly, contact us through our website, or email us at info@mobilesanistation.com.